 


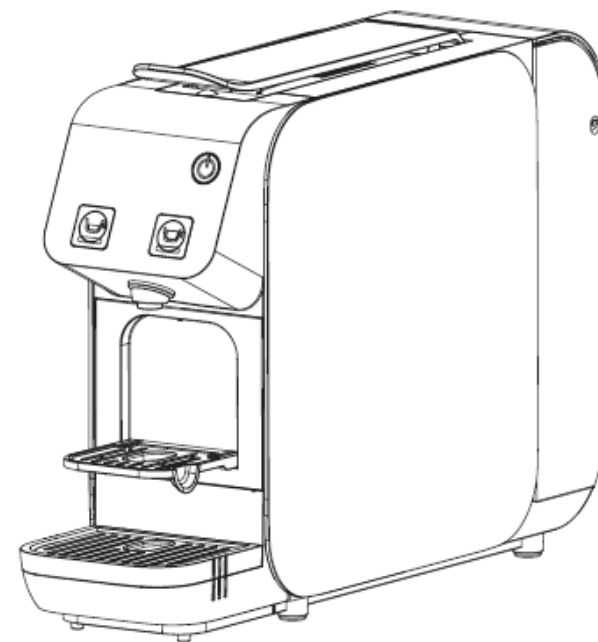

NOA CAPSULE MACHINE

WORKING WITH GM3 CLOSING SYSTEM
INSTRUCTION MANUAL

NOA



RoHS



IMPORTER:
Gruppo Gimoka S.r.L.
Via Marconi, 20
I 20090 - Trezzano S/N (MI)

 Read this Instruction Manual carefully before operating this machine.

Precautions



This appliance may become a safety hazard if these instructions and safety precautions are ignored.



In the event of an emergency: Immediately remove plug from power socket.



This appliance is intended for household and similar use only. The manufacturer accepts no responsibility and the guarantee will not apply in the event of any commercial use, inappropriate use or failure to comply with the instructions.



Check that the voltage quoted on the rating plate is the same as your voltage. Connect the appliance to earthed power sockets only. An improper connection voids warranty. Remove plug from socket if not in use for a long period of time.



Before cleaning, unplug the appliance and let it cool down. Never clean with wet cloth or immerse plug, cord or appliance in any liquids.



This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.

Keep the appliance and its cord out of reach of children aged less than 8 years. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



Use mineral water with low calcium content or special water filters.



-Do not insert fingers into capsule compartment and capsule shaft,as there is danger of injury.

-Do not use the appliance without the drip tray and drip grid.

-Keep the appliance/cord out of reach of children.

-Do not fill the water tank with hot water.

-Do not immerse the machine in liquids. Risk of electric shock.



Do not place the power cord near hot parts or sharp objects, etc.

Never touch the cord with wet hands. Do not unplug by pulling the cord.

Do not hang the power cord as there is danger of tripping. If it is damaged, do not use the appliance. In order to avoid any hazards, only allow the seller to repair the appliance and replace the power cord.



Do not attempt to open the appliance or insert anything into the openings.

All actions other than normal use, cleaning and care must be performed by the seller.

Unauthorized maintenance avoids warranty.



Do not use the appliance if it is not in perfect working condition or if there is evidence of damage. In such cases inform the seller.



Place on a flat, stable and heat-resistant work surface away from water splashes and any heat sources.



Packaging materials (plastic bags etc.) are recyclable and are potential hazards. Keep them out of reach of children.




This marking indicates that this appliance should not be disposed with other household wastes throughout the EU.To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device,please use the return and collection systems or contact the retailer where the appliance was purchased.

They can take this appliance for environmental safety.

CONTENT

Product overview	4
-----	-----
Operating instructions	5
-----	-----
Functionality	7
-----	-----
Warning function	13
-----	-----
Cleaning & Care	16
-----	-----
Trouble shooting	17
-----	-----
Technical parameters	18
-----	-----

Product overview

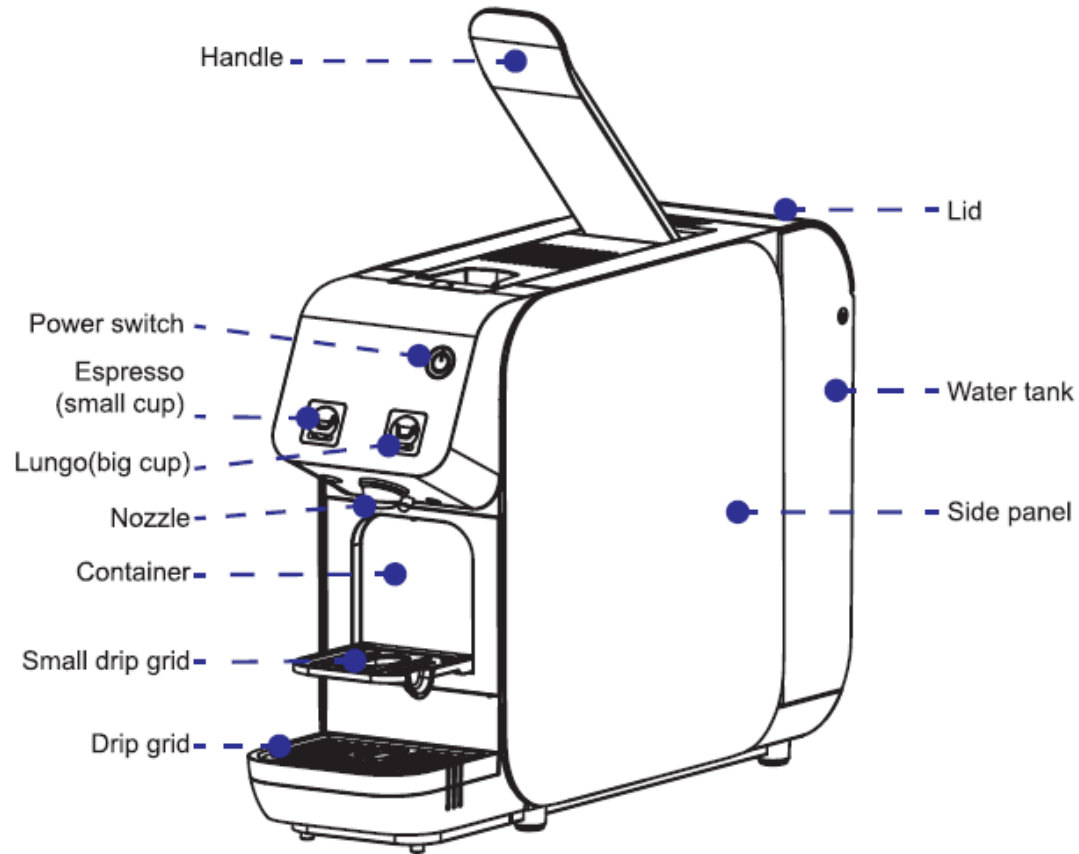


Operating instructions

1. Before use




Fill up the water tank.

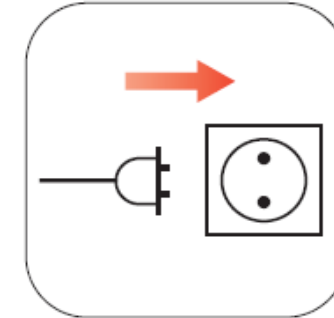

Plug power cord.



Press Power key and the appliance starts to preheat. Both volume keys blink at 1s/time. Preheating takes about 45 seconds.

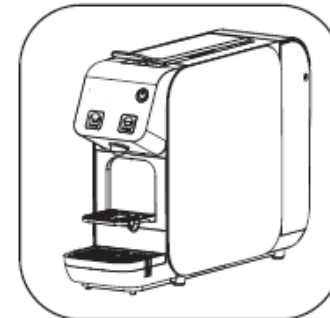

The indicators for Big Cup/ Small Cup buttons go ON, when the machine is ready.

- ⚠ Only GM3 capsule can be used on this machine. Please consult a specialized distributor before use.
- ⚠ Immediately dispose of the used capsule each time after use. Switch off the machine if you want to stop it during work.
- ⚠ At first time switch on, if you will see some drop its normal.
- ⚠ To prevent the pump running empty and overheating, always check that the tank contains sufficient water before starting the appliance.
- ⚠ Supplied with 4 suction cups; also supplied are 4 feet suitable for lacquered surf o replace suction cups.


2. Make your cup of coffee



Warm up your cup.
Place your cup, choose
your volume and run a cup
of water.



Lift the handle and insert
your capsule.

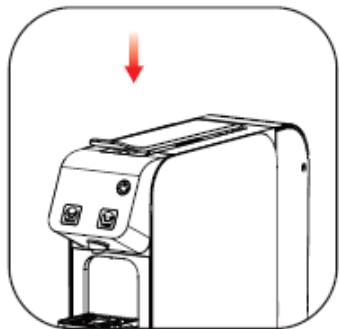


Press the handle.



When the Small Cup button is
pressed, 30 ml of coffee will be
made; in this process, the Small
Cup indicator flashes once per
second, while the Big Cup
indicator is normally ON. When
the Big Cup button is pressed, 50
ml of coffee will be done and so
on.



The indicator stops flashing,
after "beep", brewing is
done.

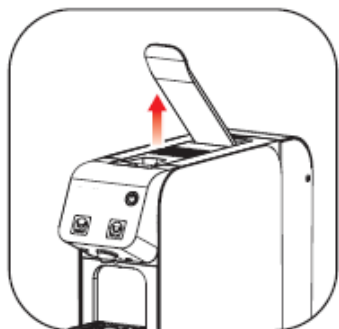




Open the handle and the
capsule drops automatically.
After brewing, please remove
capsule as soon as possible,
this will avoid dripping and
make dirty infuser.

Functionality

1. Ready to Use



1. Connect the power cord and press the power bottom 
2. The indicator lights for the key must flash  
3. The preheating takes 45 seconds
4. The machine is ready to be used when the indicator lights for the keys remain On and stop flashing.

2. Power save mode

The machine will go to Save Energy Mode when it is On but not used for 15 or 30 minutes,
depending on the settings.
The energy consumption is <math><0.5W</math>.
The factory default setting for Save Energy Mode is 15 minutes.



When the machine is ready to be used, if you would like it to activate the Save Energy Mode after 30 minutes instead of 15 minutes, you should make a long press of the power key and the big cup key together at the same time; the small cup key will flash 3 times together with a beep sound to signal that the machine is going to activate the Save Energy Mode after 30 minutes. Once the Save Energy Mode is set to 30 minutes, if you would like to switch it back to 15 minutes, please repeat the operation as above, pressing the power key and the big cup key together at the same time.



press the power key once to activate the Save Energy Mode manually.




The machine can leave "powersave mode" when power switch is pressed.




When the machine is ready to be used, press the power key and the small cup key together at the same time, after which the three keys start to flash twice in two seconds and then you hear the "beep" sound, so you are ready to use the settings. Please give the coffee key a long press to set up the desired quantity.

3. Volume setting (When setting big cup, big cup indicator blinks at 1 time/s. When setting small cup, small cup indicator blinks at 1 time/s.)

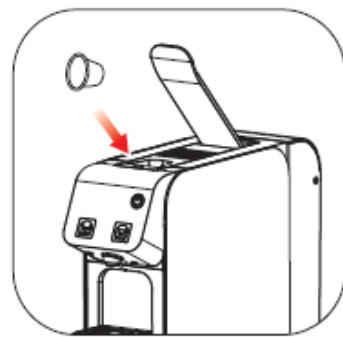

Insert your capsule.

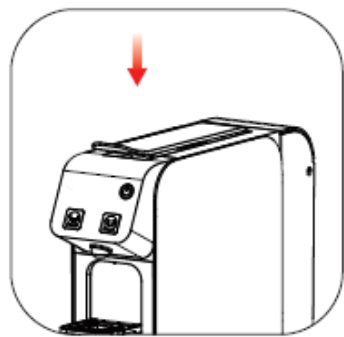

Press down the handle.


4. Temperature

4.1. Temperature setting.

(Temperature can be adjusted 8°C above or below the default setting. Each step is equal at 2 degrees.)



When in "Save Energy Mode", press the two coffee keys together at the same time for 3 seconds and the machine will be ready for setting.

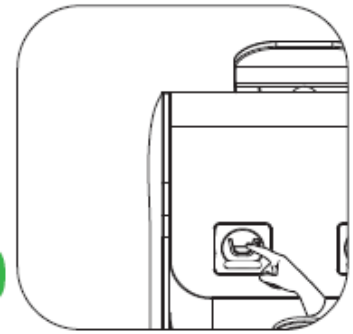

Press espresso key once and the temperature will decrease 2 degrees, press twice for 4degrees and so on. Maximum 8 degrees can be decreased.


Press lungo key once and the temperature will increase 2 degrees, press twice for 4 degrees and so on. Maximum 8 degrees can be increased.

When setting is complete, press both espresso and lungo again, after "beep", its save.

Temperature indicators:

- For 2°C down, the espresso indicator blinks 1 time every 5 seconds.
- For 4°C down, the espresso indicator blinks 2 times every 5 seconds and so on. Only 8°C can be adjusted to the minimum.
- For 2°C up, the lungo indicator blinks 1 time every 5 seconds and so on. Only 8°C can be adjusted to the maximum.
- When both volume keys illuminate, factory default setting is working.



4.2.Ambient Temperature

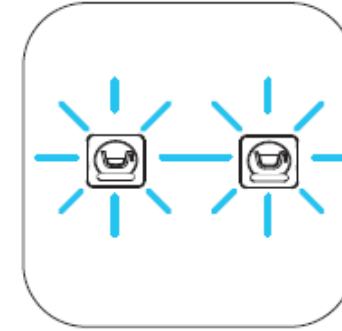

At "power save mode", hold the switch button and small button, coffee buttons flashing 2secs, after "beep", enter. In standby you will see the switch button with lower light.

At "power save mode", hold the switch button and small button, coffee buttons flashing 2secs, after "beep", exit.

5.Empty the machine

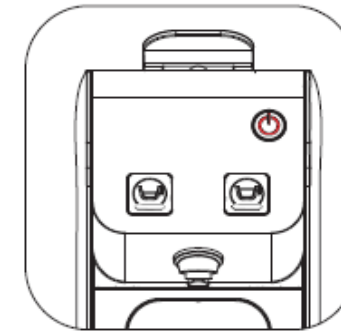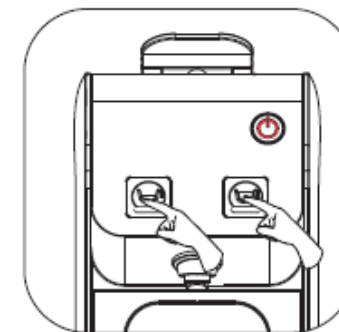

When the machine is ready to be used, press both volume keys together at the same time to empty the machine.

When "empty the machine" mode is complete, both volume keys blink alternatively at 2 times per second.

To leave "empty the machine" mode, simply power off or plug off.

6.Pre-infusion setting



For pre infusion of 1.5 seconds, during "Save Energy Mode", press the small cup key for 3 seconds until you hear the beep sound.

If you want to exit this function, please make factory default setting.



For pre infusion of 3 seconds, during "Save Energy Mode", press the big cup key for 3 seconds until you hear the beep sound.

7.Factory default setting



During the Save Energy Mode, press the coffee key and the power key together at the same time for 3 seconds.



A beep sound will signal that the factory default settings have been restored.

Warning

The alarm indicators occurs when the power button is in red

1.Warning for short of water



Water tank is out of water during work.




Lungo indicator blinks at a cycle of 6 times with 2 seconds of pausing.



Fill up the tank, press any volume key to cancel warning.


2.Warning for excessive pumping

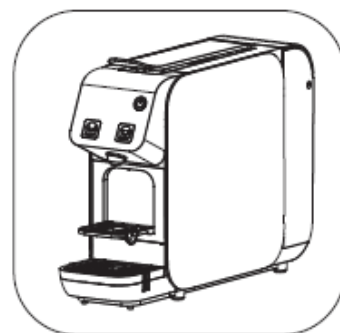

The pump has worked continuously for over 2 minutes.



Both volume indicators blink at the same time at a cycle of 6 times with 2 seconds of pause.

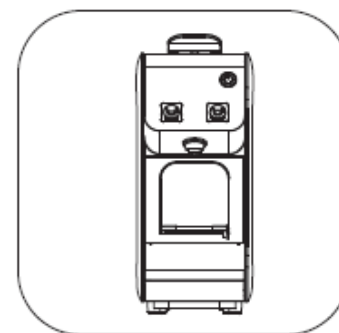

To cancel the warning, rest the machine for 1 minute, or plug off.

3.Warning for excessive use



When the machine has worked/brewed continuously for 1.5 liters of water, the system will stop working and give a warning.



Now all the three indicators blink alternatively at 3 times/s.



Shut down the machine and rest 30 minutes before reuse.

4.Warning for NTC error



The machine shuts down both boiler and pump when there is an NTC error.




Now all the three indicators blink at the same time at a cycle of 6 times/s with 2 seconds of pause.




Please contact your dealer for service.



5.Descaling alarm

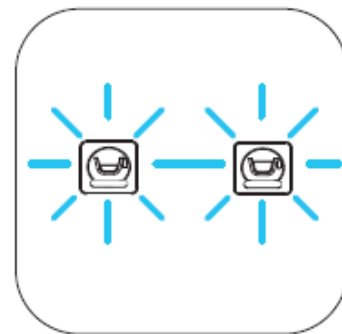

After 600 coffee, two coffee buttons flashing 5times when you turn on the machine. The machine signals indicate to you that need to be descaled. In despite the alert the machine can continues to function regularly.

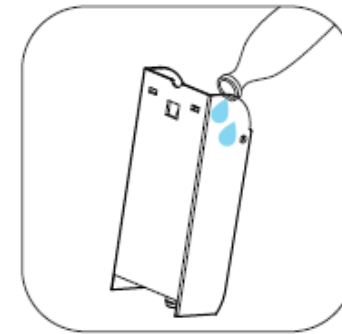

To avoid to damage the machine, you must descaling as soon as possible.

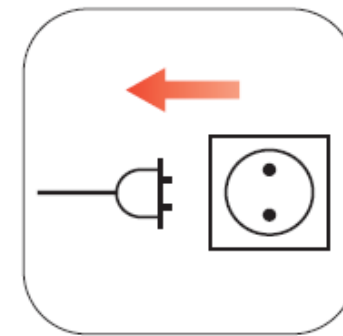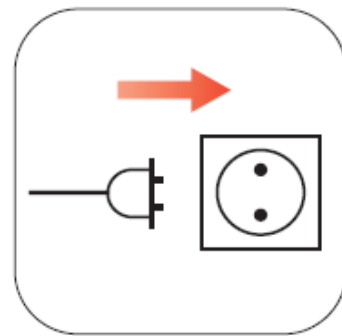

To reset the descaling alarm: Unplug the plug, hold the two coffee buttons, and plug in at the same time, after "beep", you are exit.

Cleaning & Care

1. Daily cleaning




Do not immerse the machine in water. Electric shock.



Clean the capsule container.



Clean grid and drip.

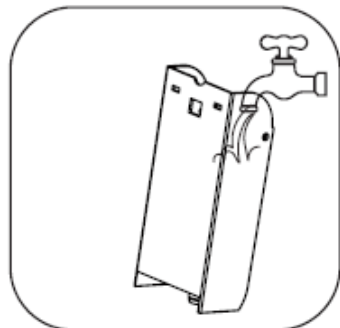

Clean the water tank.

Trouble shooting

- a** Indicator does not function
- check plug.
 - ▶ • check if voltage is the same as specified on rating label.
-
- b** Keys do not function
- ▶ • plug off and plug on again.
 - call service center.
-
- c** Handle can not be fully pressed down
- ▶ • check if there is foreign matter or capsule stuck in chamber.
 - check if the capsule is as designated.
 - call service center.
-
- d** Coffee flow is not stable
- ▶ • check water tank and make sure it is placed in position.
 - check capsule and make sure it is placed in position.
-
- e** Water, not coffee, is brewed
- ▶ • change for a new capsule.
-
- f** Water is not pumped
- ▶ • check water tank.
 - make sure water tank is positioned correctly.
 - nozzle blocked, use needle to clean it and run a cup of water before use.
-
- g** Other problems
- ▶ • call service center.

Technical parameters



See the data plate on the base of the machine



20 bar



~ 3.6 kg



550ml



5°C - 40°C



110mm



265mm



365mm