

尺寸: 125*125mm


材质: 157g双铜封面/封底过哑胶

装订方式: 骑马钉 20P 单黑

125mm

125mm

CAPSULE COFFEE MACHINE
INSTRUCTION MANUAL
PINTA (Model : CN-A01)

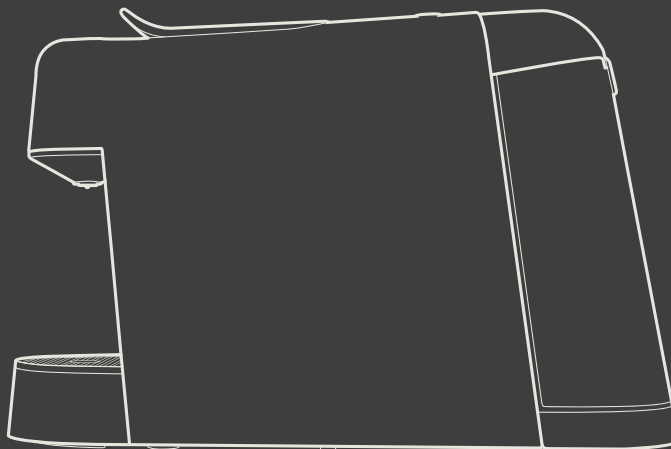

Read this instruction manual carefully before operating this machine.

Precautions



This appliance may become a safety hazard if these instructions and safety precautions are ignored.

SOS

In the event of an emergency: Immediately remove plug from power socket.



This product is intended for household and similar use only. The manufacturer accepts no responsibility and the guarantee will not apply in the event of any commercial use, inappropriate use or failure to comply with the instructions.



Before cleaning, unplug the appliance and let it cool down. Never clean with wet cloth or immerse plug, cord or appliance in any liquids.



This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.



- Do not insert fingers into capsule compartment and capsule shaft, as there is danger of injury.
- Do not use the appliance without the drip tray and drip grid.
- Keep the appliance/cord out of reach of children.
- Do not fill the water tank with hot water.
- Do not immerse the machine in liquids. Risk of electric shock.
- Only use capsules intended for this appliance. If the capsule does not fit, do not force the capsule into the appliance.
- **WARNING:** To avoid the risk of injury, do not open the brew chamber during the brew process.



Check that the voltage quoted on the rating plate is the same as your voltage. Connect the appliance to earthed power sockets only. An improper connection voids warranty. Remove plug from socket if not in use for a long period of time.



Do not place the power cord near hot parts or sharp objects, etc. Never touch the cord with wet hands. Do not unplug by pulling the cord. Do not hang the power cord as there is danger of tripping. If it is damaged, do not use the appliance. In order to avoid any hazards, only allow the seller to repair the appliance and replace the power cord.



Do not attempt to open the appliance or insert anything into the openings. All actions other than normal use, cleaning and care must be performed by the seller. Unauthorized maintenance avoids warranty.



Do not use the appliance if it is not in perfect working condition or if there is evidence of damage. In such cases inform the seller.



Place on a flat, stable and heat-resistant work surface away from water splashes and any heat sources.



Packaging materials (plastic bags etc.) are recyclable and are potential hazards. Keep them out of reach of children.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safety.



It is strongly suggested that the machine be placed evenly on solid, secure and heat-resistant surface.



- Children shall not play with the appliance.
- The instructions for appliances normally cleaned after use, and not intended to be immersed in water for cleaning, shall state that the appliance must not be immersed.
- state that the coffee-maker shall not be placed in a cabinet when in use.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.


The instructions for all appliances shall include:

- a warning to avoid spillage on the connector
- details on how to clean the surfaces in contact with food
- a statement that the heating element surface is subject to residual heat after use.

CONTENT

Product overview	4
Operating instructions	5
Functionality	7
Warning	9
Cleaning & care	11
Descaling function	13
Trouble shooting	15
Technical parameters	16

Product overview

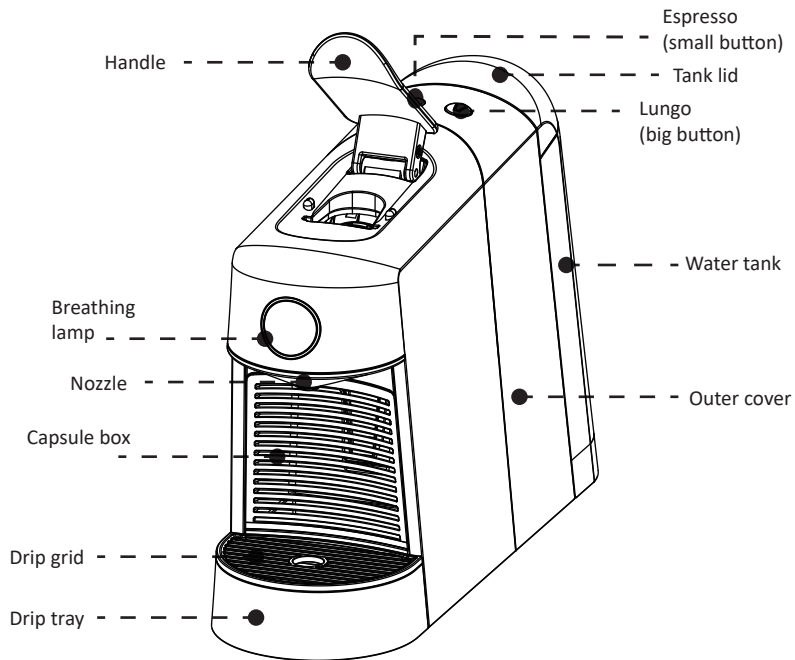


Operating instructions


1. Before use




Fill up the water tank.

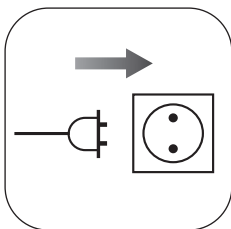

Plug power cord.

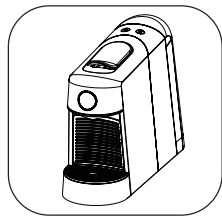

Press any button to preheat the machine normally.

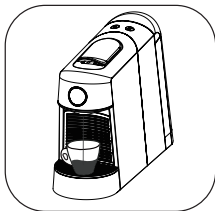

The indicator light of big and small button flashes at the same time, flashing frequency 1 time/second (the breath lamp is long bright).The preheating time is about 35s. Enter standby mode after preheating.First use or long time no use, please brew a cup of hot water to clean the machine.

PS: Press any button in the preheating process (this light flashes and the other light goes out).

The default is to start the mode as soon as the preheating is finished.

- ▲ *Do not inject hot water into the water tank, otherwise it will cause the water tank to break, which will lead to electric shock and other dangerous!*
- ▲ *Please note the indicated position of the highest water level (Max)!*
- ▲ *Only specific capsules are used on this machine. Please consult a specialized distributor before use!*


2. Make your cup of coffee




Warm up your cup.
Place your cup, choose your
volume and run a cup of water.



Lift the handle and insert
your capsule.

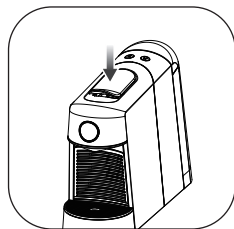


Press the handle.

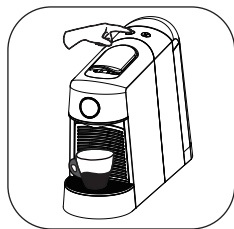

Press small button, 40ml
coffee brewed. The small
button blinks 1time/s, big
button keep long bright.
(Press any button stop
brewing coffee during this
process).




Press big button, 110ml
coffee brewed. The big
button blinks 1 time/s,
small button keep long bright.
(Press any button stop brewing
coffee during this process).

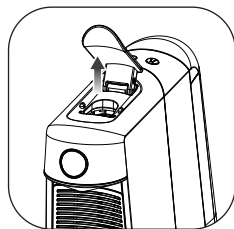


Open the handle (capsule
will drop into capsule box
automatically).

Functionality

1. Standby mode

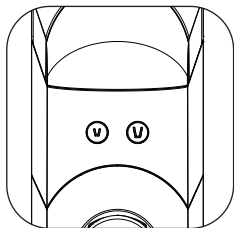


Big/small button light long bright, machine will enter standby mode.

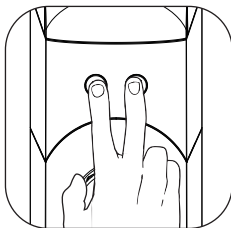


Press the big/small button at the same time, it will turn off.

2. Power save mode


If power-saving mode time is too long, it will enter preheating again when switch on machine. The power consumption is $\leq 0.5W$.

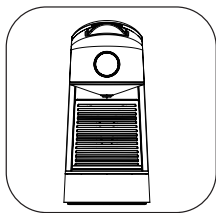

In standby mode, if the machine does not enter any instructions for 10 minutes, the machine enters power-saving mode.

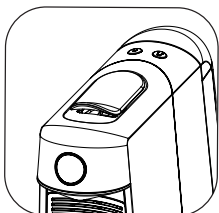


Big and small cup button off, only breathing lamp flash (about 1 time / 4 s).

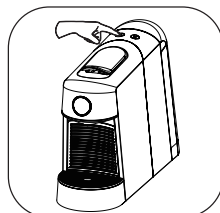

Press any button to exit this mode.


3. Volume setting

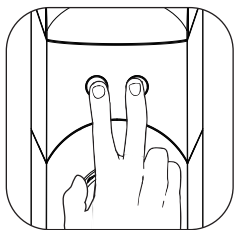

Press and hold big and small button 5s in standby mode, two lights flash (2 time / 1 s). Enter volume setting mode.




Press and hold the big cup (or small cup) button. Machine brew coffee until your desired volume is reached, then release button (finish volume setting).

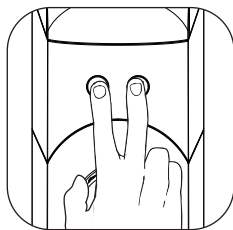


Press and hold both buttons for 5 sec in the same time to save and exit the volume setting.

4. Factory default setting

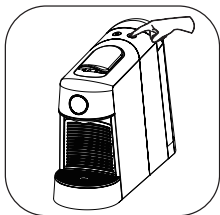


Press big button and plug on at the same time in power outages.

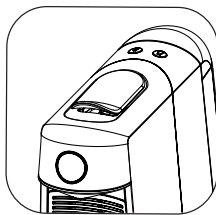


The machine will restore factory setting and enter standby mode(big/small button indicator flashes 2 times at the same time, flash frequency is 1 time/ 1 s).


5.Descaling mode

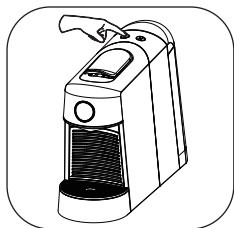

Press small button and plug on at the same time in power outages. Two lights flash (2time/1s).Enter descaling mode.

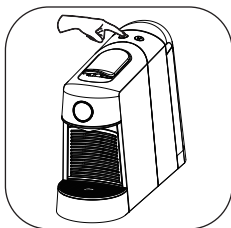


Press any button start descaling.

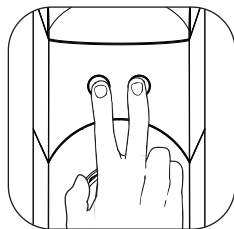


Press and hold big/small button 5s again, it will exit descaling mode.

Warning

1.Warning for short of water

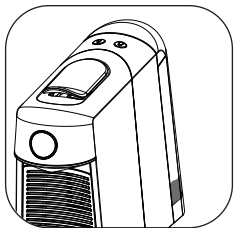

Water tank is out of water during work.

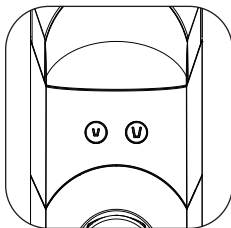


Big and small button flash 1s at frequency 3 times/1s alternative, stop 2s, cycle in turn.




Fill up the tank, press any volume key to cancel warning.


2.Warning for excessive use

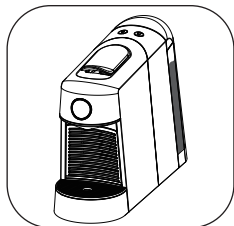

When the machine has worked/brewed continuously for 1.5 liters of water, the system will stop working and give a warning.

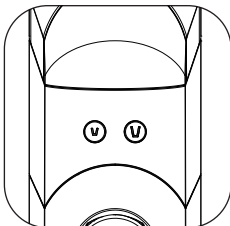


Big and small button flash at 3 times/s, rest for 30 minutes and go into standby mode. If the time between two cups is more than 2 minutes, then 1.5 liters become 0.

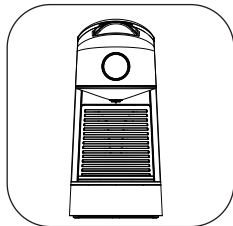

Shut down the machine and rest 30 minutes before reuse.

3.Warning for NTC error

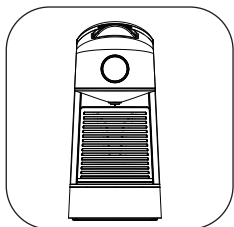

The machine shuts down both boiler and pump when there is an NTC error.




Big and small button indicator flash alternative, flash frequency 2 times/1s.
Logo plate flash, flash frequency 2 times/1s.

Please contact your dealer for service.

Cleaning & care

1. Daily cleaning

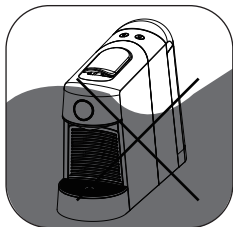


Do not immerse the machine in water. Electric shock.



Clean capsule box.




Clean drip grid, drip grid cover and drip tray.

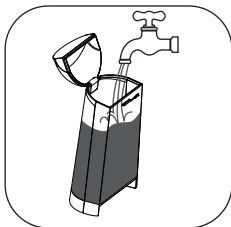


Clean the water tank.

Descaling function


▲ *The descaling solution may be harmful. Avoid contact with eyes, skin and surfaces. The following table will indicate the descaling frequency required for the optimum of your machine, based on water hardness. For any additional questions you may have regarding descaling, please contact your distributor.*
Duration approximately 15 minutes.

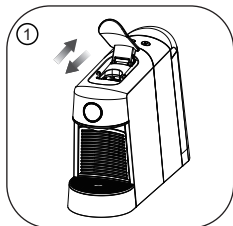


Lift and close the lever to eject the capsule into the used capsule box.

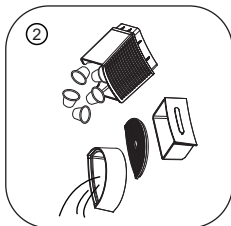


Empty the drip tray, drip grid and used capsule box.

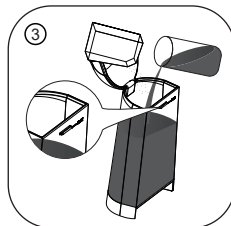


Mix the descaling liquid with the water as instructed. Fill the water tank up to the 0.65L line with potable water.

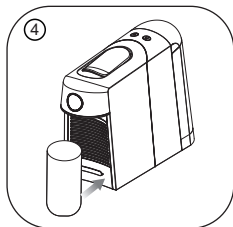


Place a container (min. volume 0.65L) under the coffee outlet.

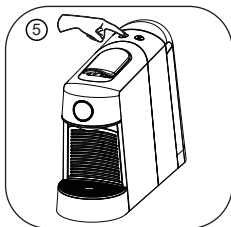

Press small button and plug on at the same time in power outages. Two lights flash (2time/1s). Enter descaling mode.

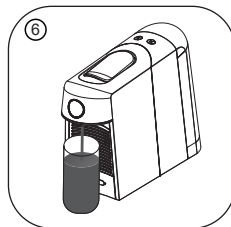

Press any key to start descaling until the water tank is empty.

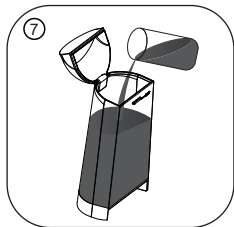

Fill the tank again with 0.65L of descaling liquid with MAX scale and repeat step 6 until the tank is empty.

⑩ To exit the descaling mode, hold on both the Espresso and Lungo buttons for 5 seconds.




Empty and rinse the water tank. Fill with fresh potable water.

⑪ Empty drip tray.



Repeat step 6 twice. (in order to clean the residual descaling agent in the machine).

Water hardness:

	fH	dH	CaCO ₃	Descaling after:  (40ml)
H(HIGH)	36	20	360 mg/l	300
M(MEDIUM)	18	10	180 mg/l	600
L(LOW)	0	0	0 mg/l	1200

fH French degree

dH German Grade

CaCO₃ Calcium Carbonate

Trouble shooting

- a** Indicator does not function
- ▶ ·check plug.
 - ▶ ·check if voltage is the same as specified on rating label.
-
- b** Keys do not function
- ▶ ·plug off and plug on again
 - ▶ ·call service center
-
- c** Handle can not be fully pressed down
- ▶ ·check if there is foreign matter or capsule stuck in chamber.
 - ▶ ·check if the capsule is as designated.
 - ▶ ·call service center.
-
- d** Coffee flow is not stable
- ▶ ·check water tank and make sure it is placed in position.
 - ▶ ·check capsule and make sure it is placed in position.
-
- e** Water, not coffee, is brewed
- ▶ ·change for a new capsule.
-
- f** Water is not pumped
- ▶ ·check water tank.
 - ▶ ·make sure water tank is positioned correctly.
 - ▶ ·nozzle blocked, use needle to clean it and run a cup of water before use.
-
- g** Other problems
- ▶ ·call service center.

Technical parameters



See the data plate on the base of the machine



20 bar



~ 2.6 kg





650ml



5 °C - 40 °C



 102mm  337mm  220mm

Please search user manual at www.cino.cn

your
barista



MANUFACTURER:

CINO TECHNOLOGY (SHENZHEN) LTD

3rd, 4th & 5th floor, G Building, Licheng Scientific and Technology Industrial Park, Xinxu Road,
Gonghe community, Shajing, Baoan, Shenzhen 518104, P.R China

www.cino.cn